

PRO II REAR HUB PARTS LIST

ITEM NO.	DESCRIPTION	QTY	PART NO.
1	QR DRIVE SIDE SPACER	1	HUB421
2	DIA. 15 x 1.5 O-RING	2	INC. WITH HUB421
3	15 - 28 BEARING	1	61902 2RS
4	25mm BARREL SPACER	1	HUB427
5	ALLOY CASSETTE BARREL	1	HUB513
6	PAWL SPRING	4	HUB515
7	PAWL	4	HUB516
8	15 - 24 BEARING	2	61802 2RS
9	2MM BARREL SPACER	1	HUB429
10	DRIVE SIDE SEAL	1	HUB517
11	24 TOOTH RATCHET	1	HUB518
12	17 - 30 BEARING	2	61903 2RS
13	REAR HUB BODY	1	HUB112
14	QR REAR SPINDLE	1	HUB215
15	NON DRIVE SIDE SEAL	1	HUB519
16	QR NON DRIVE SIDE SPACER	1	HUB422
17	10MM THRU DRIVE SIDE SPACER	1	HUB423
18	10MM THRU REAR SPINDLE	1	HUB216
19	10MM THRU NON DRIVE SIDE SPACER	1	HUB424
20	12MM THRU DRIVE SIDE SPACER	1	HUB425
21	12MM THRU REAR SPINDLE	1	HUB217
22	12MM THRU NON DRIVE SIDE SPACER	1	HUB426

